


LIGHT (A Key) —

MODE (B Key) —

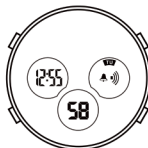

— (D Key) START

— (C Key) RESET

## A. Features

- > 6 Digits LCD Display, Display Hour ,Minute ,Second ,Month ,Day and Week
- > Daily Alarm and Chime hourly
- > Snooze
- > 12 / 24H format selectable, Auto Calendar
- > 1/100 second Chronograph with split functions
- > EL backlight

## B. Operational Manual



**1. At any state ,press A key EL backlight for 3s .**

### 2. Real Time

- > Press C key to display Alarm ;Press D key to display Date .
- > Turn On / Off Alarm and Chime
  - a). Press C + D key to turn on / off Alarm ,indicator "A" displaying for on .
  - b). Press C + B key to turn on / off Chime ,all days of week displaying for on .

### 3. Chronograph

- > The display range of the Chronograph is 23 hours ,59 minutes ,59.99 seconds.
- > Press D key to Start/Stop running ;
- > When stop ,press C key to zero .
- > When running ,press C key to split count .
- > Then press D key to exit split count ,and stop counting ;
- > When exit split count ,press C key to display all counts ; and press C key again to zero ;
- > When running ,press B key to return to Real Time Mode ,and it running at back .

### 4. Daily Alarm

- > "Hour " flashing once entry Daily Alarm .
- > Press C key to select "Hour " or "Minute "setting
- > Press D key to adjust the flashing item
- > Press C key to confirm
- > Press B key to return to Real Time mode
- > To activate and to deactivate the alarm function:  
At the real time display, press and hold the key "C", then press key "D" to turn the alarm ON or OFF alternatively.  
The symbol "A" on indicates the alarm is "ON".  
No symbol sign indicates the alarm is "OFF"
- > Alarm Snooze ON/OFF  
At Alarm sounding state ,press C key to stop sounding ,and press D key to activate the snooze function .  
When Snooze function be ON ,it will sound five minutes later ,and auto stop after sounding for a minute .

### 5. Time Setting

- "Second " flashing when loading ,press D key to zero ; Press C key to select item as following sequence :  
Minute → Hour → Day → Month → Week
- > Press D key to adjust the flashing item .
- > When setting "Hour " , "H " display for 2 4 H format ; "A " or "P " for 1 2 H format .
- > Press D key while the seconds are in the range of 30 to 59 resets them to 00 and adds 1 to the minutes . In the range of 00 to 29,the minutes are unchanged .

## HOW TO SET TIME FOR 3 HANDS MODEL

If there is a plastic piece under the crown, gently remove it, press the crown down to normal position.

Refer to the diagram below, gently pull the crown out to the first click position. The second hand will stop when the crown is in the first click position. When in the first click position, turning the crown will change the minute and hour hands. Set the correct time, then gently push the crown back to normal position, and the second hand will begin moving again indicating normal operation.

