

operation instruction

Precautions

 
- Do NOT operate any button when swimming or diving under water.
- In case of existence of water fog or drop on the interior surface of the looking glass, please contact the authorized maintenance center for maintenance to avoid corrosion to internal electronic components.
- Clean the surface with a soft cloth and clean water instead of chemicals (esp. soap water); otherwise, the rubber seal inside the case may be damaged.
- Long-duration use of cold-light LCD may take much power.
- Do avoid strong shock (ex. anti-shock series watches). The electronic watch can bear common shock. However, it may be damaged if subject to rough use or dropped to a hard surface.
- Do NOT expose the watch to environments which is too hot or cold.
- Do NOT expose the watch to strong electric field or environment with high radio frequency.
- To avoid degraded service life, do not illuminate the EL lamp more than five times on each day.
- The cold-light LCD is unapparent if the watch is exposed to sunlight.
- The monthly error is ± 40 sec. at normal temperature of 5 to 35°C (ranging within international standard allowance).
- Water-resistance depth is up to 10m.

Operation Manual of Dive Watch Series

I. Keypad Schematic



II. Function Mode



Date Setting Mode



Time Display Mode



Week Mode



Alarm Clock Setting Mode

Under normal time displaying, press any key once to check time display. When LED light is off, respectively press key A, B, C or D twice to check month, date, time, minute, week, and alarm function.

III. Function Description:

- Five modes: timing function, second display function, month and date display function, week display picture and alarm function.
- Display year, month, date, hour, minute and second. (Year range: 2000-2099)
- Display system of 12 hours or 24 hours .
- Under any mode, press any key once to check time and illuminate LED for three seconds.
- Operating voltage: 3.0V

IV. Function Setting

◇ Time and date setting mode:

- When timing function picture is displaying, press B key until second starting to flash, which means setting picture is entered.
- Press key B to select items to be set accordingly (second, hour, minute, year, month, date, 12/24-hour modes).
- Press key C to adjust selected numbers.
- Week setting adjusts automatically based on the date that you select (year, month, date).
- Date can be set between year 2000 to 2099.

◇ Setting of alarm time:

- ALM: stands for alarm mode
- ALE: stands for alarm is started.

Under normal operating state, press key D twice to enter alarm state, press key D to enter alarm time setting mode. Function displays: (AL OF) indicates the function is under close state.

Meanwhile press key C once, If ALE light illuminates, it means that alarm function has started. LED displays: (AL ON), re-press key D to select hour and minute, press key C to adjust, press key B or set a cycle to exit.

- Alarm duration: 10 seconds.

V. Comparison Table of Week Display:



Sunday



Monday



Tuesday



Wednesday



Thursday



Friday



Saturday